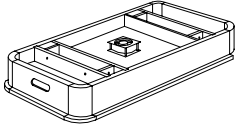
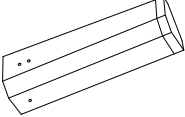
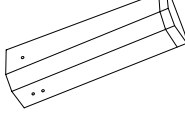
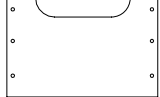

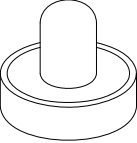
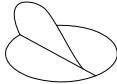


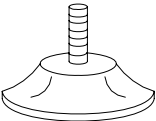
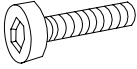
 

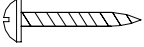
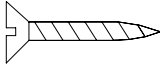
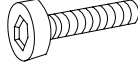

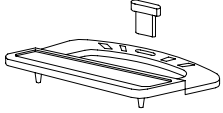
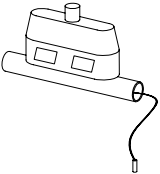
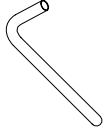
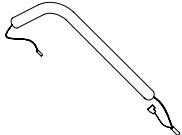
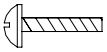
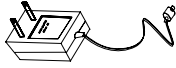



# Parts List For 63484-SC

<p>#1</p>  <p>Main Frame 1 piece</p>	<p>#2</p>  <p>Right Leg 2 pieces</p>	<p>#3</p>  <p>Left Leg 2 pieces</p>	<p>#4</p>  <p>Leg panel 2 pieces</p>
<p>#5</p>  <p>Scorer 2 pieces</p>	<p>#6</p>  <p>Pusher 2 pieces</p>	<p>#7</p>  <p>Pusher felt sticker 2 pieces</p>	<p>#8</p>  <p>Red puck 2 pieces</p>
<p>#9</p>  <p>Yellow puck 2 pieces</p>	<p>#10</p>  <p>Leg leveler 4 pieces</p>	<p>#11</p>  <p>Leg Bolt 12 pieces</p>	<p>#12</p>  <p>Leg Washer 12 pieces</p>
<p>#13</p>  <p>Allen tool 1 piece</p>	<p>#14</p>  <p>3.5mm round head screw 12 pieces</p>	<p>#15</p>  <p>3.5mm flat head screw 4 pieces</p>	<p>#16</p>  <p>Scorer Bolt 2 pieces</p>
<p>#17</p>  <p>4.0mm round head screw 2 pieces</p>	<p>#18</p>  <p>Goal 2 pieces</p>	<p>#19</p>  <p>Electronic scorer 1 piece</p>	<p>#20</p>  <p>Left Metal pole 1 piece</p>
<p>#21</p>  <p>Right Metal pole 1 piece</p>	<p>#22</p>  <p>3.0mm Blunt screw 4 pieces</p>	<p>#23</p>  <p>6V DC Adaptor 1 pieces</p>	

## Assembly Instructions


### Step 1

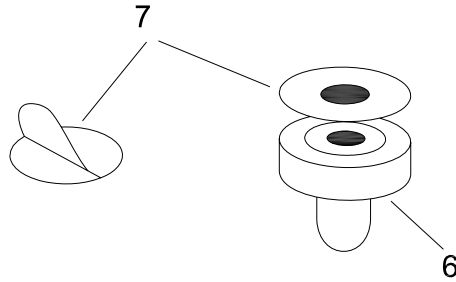 Adhere the Pusher felt stickers (#7) to the Pushers (#6).



### Step 2

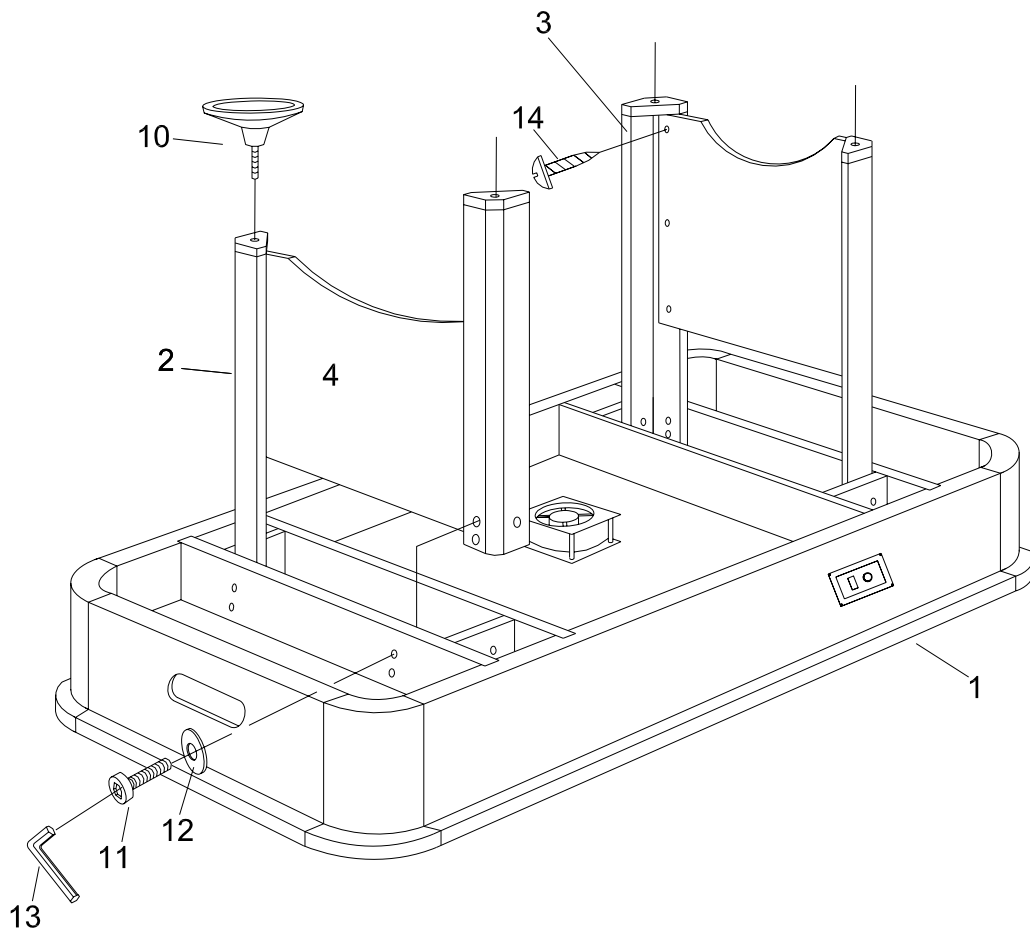 Place the main frame (#1) face down on a flat, clean surface. Attach the legs (#2) - (#3) using the leg bolts (#11), leg washers (#12) as shown in the diagram. Affix the leg panels (#4) to each set of legs using the 3.5mm round head screws (#14) as shown. Screw the leg levelers (#10) into the bottom of each leg.



### Step 3

Attach the scorer (#5) to the top rail of the main frame by screwing the 3.5mm flat head screws (#15) into the pre-drilled holes. Next insert the goals (#18) into the appropriate pre-drilled holes at each end of the main frame. These goals are optional and can be removed for standard game play.

Attach the electronic scorer (#19) using the screw (#22). Connect the wires of the Right Metal pole with wires (#21) to the wires of the electronic (#19) and insert a 4.0mm screw (#17) in the hole allotted. Next insert the Left Metal pole (#20) into the appropriate hole in the main frame and connect to the electronic scorer (#19) using the 4.0mm screw (#17). Secure the left metal pole (#20) by inserting a scorer bolt (#16) through the bottom of the main frame.

